

POMPEYA

MATERIALS

Polyester Resin, mineral charge (dolomitas) and glass fibre ecologic (poraver). Gel Coat surface finish type ISO NPG 500 micras thickness.

CHARACTERISTICS

- Density: 1800 Kg/m³
- Thickness: 2,8 cm
- Light Shower Tray better handling in installation.

PROPERTIES

By mixing Poraver and resin (Hi-Tecch material used in external building structures) the shower tray:

- Improves flatness thanks to high frequency vibration production process
- Non-deformation resistance
- High resistance to dramatic changes in temperature
- High Resistance to impacts damage
- Hygienic and anti-bacterial surface
- Easy cleaning and maintenance
- Hardness level like a stone
- Resistance to usual chemical cleaning home products

CERTIFICATES



- **WARRANTY:** 2 years


WEIGHT (Kg.)	700	800
1000	24,2	27,2
1100	26,2	30,2
1200	29,2	33,2
1300	31,2	35,2
1400	34,2	38,2
1500	35,2	41,2
1600	38,2	42,2
1700	40,2	44,7
1800	44,2	47,2

NECESSARY ELEMENTS

- Steel Grid included
- Valve not included (recommended screw valve code 22206. Valve diameter 90cm)

REPARATION KIT AVAILABLE: YES

- White Cod. 61319
- Anthracite Cod. 64531
- Taupe Arena Cod. 64530

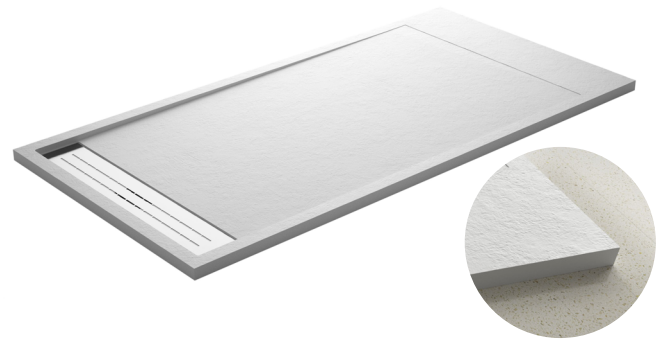

Textured: STONE

Finishes in STOCK



* RAL colors on request.

Taupe

AVAILABLE DIMENSIONS (cm)

L (x 700 ancho)	L (x 800 ancho)	ancho 700	ancho 800
901 - 999 (x700)	901 - 999 (x800)	1000x700	1000x800
1001 - 1099 (x700)	1001 - 1099 (x800)	1100x700	1100x800
1101 - 1199 (x700)	1101 - 1199 (x800)	1200x700	1200x800
1201 - 1299 (x700)	1201 - 1299 (x800)	1300x700	1300x800
1301 - 1399 (x700)	1301 - 1399 (x800)	1400x700	1400x800
1401 - 1499 (x700)	1401 - 1499 (x800)	1500x700	1500x800
1501 - 1599 (x700)	1501 - 1599 (x800)	1600x700	1600x800
1601 - 1699 (x700)	1601 - 1699 (x800)	1700x700	1700x800
1701 - 1799 (x700)	1701 - 1799 (x800)	1800x700	1800x800

RECOMENDED INSTALLATION

- Place the shower tray in a plane surface at least 24h before installation
- If you storage the shower trays make it is horizontal way. Don't storage them in vertical
- During installation keep the plastic bag to protect the shower tray against other abrasive products at least until the bathroom work is full finished
- It's very important to install the shower tray with adhesive polyuretane, SIKAFLEX type

CUTTING : YES

Shower tray has a mineral mix composition with recycled glass granules. This material is visible so the cut side must always be installed against the wall.

